


HANDLING & ASSEMBLY INSTRUCTIONS

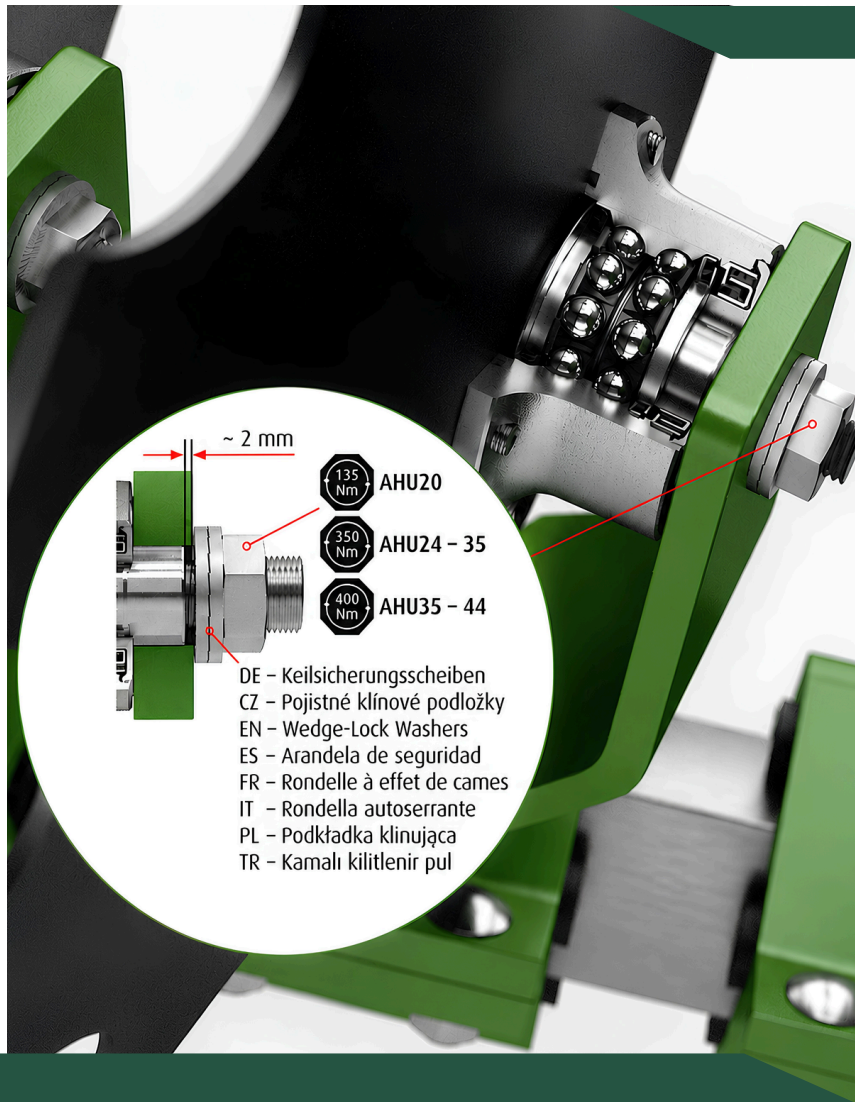

Before Installation, please ensure:

- ✓ Surfaces are clean & undamaged
- ✓ Correct hub model is selected
- ✓ Fasteners are in good condition
- ✓ Correct torque is available
- ✓ Hub unit rotates freely before installation
- ✓ Instructions are fully understood

Installation procedure:

- Step 1 - Inspect all components
- Step 2 - Position assembly correctly
- Step 3 - Install fixing bolts
- Step 4 - Install wedge-lock washers
- Step 5 - Apply specified torque
- Step 6 - Check torque after installation

Why Correct Installation Matters

- ✓ Maximum bearing life
- ✓ Optimum sealing performance
- ✓ Improved machine reliability
- ✓ Reduced maintenance costs
- ✓ Safe operation
- ✓ Maximum return on investment

The Neuweg Difference

For more than 70 years, Neuweg has specialised in bearing solutions for demanding agricultural applications. Today, customers can choose from two complementary hub ranges:

Requirement	Neuweg Premium	Neuweg AgriLine AGR
Heavy duty operation	✓✓✓	✓✓
Maximum service life	✓✓✓	✓✓
Premium sealing	✓✓✓	✓✓
Competitive acquisition cost	✓✓	✓✓✓
Standard agricultural applications	✓✓✓	✓✓✓

www.neuweg-tech.com